

COMMAX Co.,Ltd.

513-11, Sangdaewon-dong, Jungwon-gu, Seongnam-si, Gyeonggi-do, Korea Int'l Business Dept.: Tel.; +82-31-7393-540~550 Fax.; +82-31-745-2133

Web site: www.commax.com







User Manual

Multi-Door Camera Entry System DRC-nAM

www.commax.com

COMMAX Co.,Ltd.




- Thank you for purchasing COMMAX products.
- Please carefully read this User's Guide (in particular, precautions for safety) before using a product and follow instructions to use a product exactly.
- The company is not responsible for any safety accidents caused by abnormal operation of the product.

Introduction

Your unit is designed so it can be flush mounted/attached on the wall or used. When flush mounted/attached on the wall, the stand permits you to the unit for angular of unit view. The model number is located on the bottom and record the serial number in the space provided below (available). Refer to these numbers whenever you call upon your Commax dealer regarding this product.

Model No. Secial No.

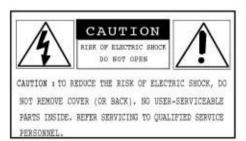



This symbol is intended to alert the user to the presence of uninsulated "dangerous Voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



This symbol is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

Notice Model Name: "N" indicated to channel numbers and "2", "4", "6", and "8" indicated channels.

- DRC-2AM: For multilpe 2 channels Videophone
- DRC-4AM: For multilpe 4 channels Videophone
- DRC-6AM: For multilpe 6 channels Videophone
- DRC-8AM: For multilpe 8 channels Videophone
- DRC-nAM: For silver color panel
- DRC-nAMG: For gold color panel

@COMMAX COMPANY LIMITED

All Rights Reserved

COMMAX is Trademark and Registered of commax co., ltd. and accessories are manufactured by COMMAX Co., Ltd.

мемо

Important Safeguard

Damage Requiring Service - This equipment from the power source and refer servicing to qualified service personnel under the following conditions:

- a. when the power is damaged;
- if liquid has been spilled or objects have fallen into the unit.;
- c. if the equipment has been exposed to rain or water,
- d. if the equipment has been dropped or otherwise damaged;
- e. when the equipment exhibits a distinct change in performance this indicates a need for service.

Water and Moisture - Do not use this product near water, for example, near a bath tub, wash bowl, kitchen sink, or laundry tub, in a wet basement, or near a swimming pool, and the like.

Accessories - The product may fall, causing serious injury to a child or adult, and serious damage to the appliance. Any mounting of the appliance should follow the manufacture's instructions, and should use a mounting accessory recommended by the manufacturer.

Object and Liquid Entry - Never push objects of any kind into this product through openings as they may touch dangerous voltage points or shirt-out parts that could result in a fire or electric shock. Never spill liquid of any kind on the product.

Lightning - For added protection for this product before a lightning storm, or when it is left unattached and unused for long periods of time, unplug it from the wall outlet and disconnect the other system. This will prevent damage to the product due to lightning and power-line surges. Be sure your antenna is properly ground. If you live in an area heavily prone to lightning stroms, it is recommended that you invest in power-line, telephone-line, RF cable and actuator/polarization surge protectors to protect your appliance system from possible damage.

Servicing - Do not attempt to service this product yourself as opening or removing covers may expose you to dangerous voltage or other hazards. Refer all servicing to qualified service personnel

Replacement Parts - When replacement parts are require, be sure the service technician has used replacement parts specified by the manufacturer or having the same characteristics as the original part. Unauthorized substitutions may result in fire, electric shock or other hazards.

Safety Check - Upon completion of service or repairs to this product, ask the service technician to perform safety checks to determine that the product is in proper operating condition.

Power Line -The commax door entry system should not be located near overhead power lines or other electric light or power circuits, or where it can fall into power lines or circuits. When installing a door entry system, avoid dangerous contact with power lines or circuits.

Attachment - Do not use attachments not recommended by the product manufacturer as they may cause hazards.

Power Sources - This equipment should be operated only from the type of power source indicated on the marking label.

Specification

Model No. DRC-2AM DRC-4AM DRC-6AM DRC-8AM

Image Device 1/3" CCD Camera

Installation Method Flush Mount type

Power Sources DC 24V 120mA

Horizontal Resolution 230TV line

Installation System 4 wires common type - 8 wires (maximum) - Polarity

Communication Ways Synchronous Communications

Calling System Code Divided Type

Communication Distance 200m (For 3C2V Coaxial cable)

Scene Illumination 0.1 Lux (300mm from the camera)

Scanning Frequency Horizontal: 15.75KHz Vertical: 60Hz

Image Angular Horizontal: 68 ° Vertical: 55°

Angular Adjust Left: 13° Right: 13°

Up:4° Down:4°

Ambient Operating Temperature -10°C to +40°C

Dimensions (W/H/D)mm 123/320/61 (for DRC-8AM)

External design, features, functions and specifications can be changed without any prior, for promoting the quality of the product.

For More Information, Contact to Web Site Printed in Korea

General Features

There is no where better than entry door home system, to make your house door entry home commax door Camera entry system are here to provide positive entry door camera system and convenience life.

- Aluminium material prevent corrision-strong construction is achieved by thick aluminium plate
- Easy installation and gracefulness design
 - hinge for downward opening of the front plate and retaining lead
 - contract buttons on the front plate
- Capable of multi- installation for sub-units.
- Designed flush mount on the wall type.
- A few number of components
- Easy Assembly
- Front panel suitable for both audio and video systems


| | Preparation |
|-----------------|---|
| On Safety | For DC operation, operate the unit on 24V DC 120mA Should any solid object or liquid fall into the cabinet, disconnected the unit and have it checked by qualified personnel before operating it any further. Allow adequate air circulation to prevent internal heat build-up. |
| On Installation | Do not place the unit on surfaces (rugs, blankets,etc) or near materials(curtains, drapereis) that may block the ventilation slots. Do not install the unit near heat sources such as radiators or air ducts or in a place subject to direct sunlight, excessive dust, mechanical vibration or shock. |
| On Operating | Keep the unit and glass away from equipment with strong magnets, such as a microwave oven or large loudspeakers. When the unit is not in use, turn off the power to conserve energy and to extend its useful life. |
| On Cleaning | Clean the cabinet, glass and controls with a dirt soft cloth, or a soft cloth lightly moistened with mild detergent solution. Do not use any type of solvent, such as alcohol or benzene, which might damage the finish. If you have any questions about this unit, contact your Commax dealer. |

System Network

- For DC operation, operate the unit on 24V DC.
- Make sure that checking to polarity before wire connection.
- 3. For camera extension, switch OFF level.

Notice: Do not make any wire connections to these terminals while the unit is connection with standard wires.

Attention: Make sure that check the DC 24V or other wires

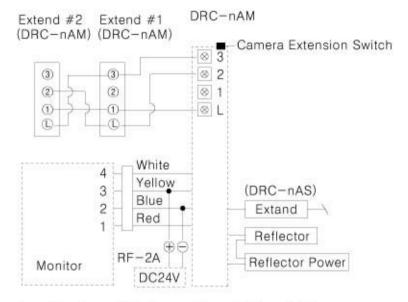

How to adjust residents monitor DIP switch

| DIP switch | 8 | 7 | 6 | 5 | 4 | 3 | 2 | 1 |
|------------|---|---|---|---|---|---|---|---|
| OFF | | | | | | | | _ |


57 ~ 80 residents: DIP Switch #8 is ON level 33 ~ 56 residents: DIP Switch #7 is ON level 9~32 residents: DIP Switch #6 is ON level

- 1 to 5 DIP switch is selector to wanted residents
 - by 1, 2, 4, 8,16 position
- If do not expandable to monitor, keep on DIP switch 6,7,8, is OFF level

Location And Function of Control

Front View

Rear View

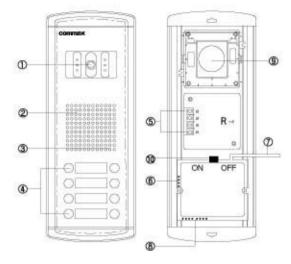

- CCD Camera Lens
- Speaker
- Microphone
- Resident Calling Buttons
- Camera Extention Connection Line
- 6 Resident Videophone Connection Connector
- Release Connection Wire
- 8 Resident's Extension Connection Wire (For DRC-nAS)
- (9) Angular Adjust
- Camera Extension Selection Switch (For camera extension switch off level)

How To Operation

Calling to desired residents on the common porch

- When a visitor press a button on the panel, the monitor will show the picture of the visitor who is calling.
- If you canversation with wishes, picking up the handset with the conversation may be started.
- Door camera entry system that 4 wires polarity
- Can expandable to 24 monitors (maximum) on install to DRC-nAS if wanted

Attaching (Flush) Consideration

When selecting the location for flush/attaching your unit, please remember...

- Allow adequate space on the both side of the unit for proper ventilation access to cable and unit for aural easy.
- For angular field of camera view and just by manually be sure there is sufficient space behind the unit to adjustment to angular field of view its position.
- The area directly below the unit should not be used for cooking radiator or by other appliances generating heat or steam.
 Keep in mind your normal work pattern especially the use of other counter top electrical appliances.

Note On Use and Installation

Do Not Aim The unit At The Sun/Rainning
Do not aim the unit at the sun or point it at the
sun/rainning even if you are not shooting.

Do Not Shoot Intense Light Framing intense light such as a spotlight may cause bloom or smear. A vertical stripe may appear on the screen. However, this is not a malfunction.

Treat The Unit With Care

Do not drop the unit or subject it strong shock of vibration. Otherwise, the components may malfunction.

Never Touch Internal Parts

Do not touch the internal parts of the camera other
than that parts specified. Otherwise, the camera
may malfunction.

Do Not Slash Water On The Unit Install the unit where the unit can be kept dry. If the unit a gets wet, turn off the power and contact you dealer. Install The Unit Where No Audio Noise Sound If cables are wired near electric lightning wires or a TV set, noise may appear in images. In this event, relocate cables or reinstall equipment.

Check The Ambient Temperature And Humidity Avoid using the camera where the temperature is hotter or colder than specified. Otherwise, the quality of images may deteriorate or internal parts may be affected. Special care is required to use the camera at high temperature and humidity.

Should You Notice Any Trouble

If any trouble occurs while you are using the camera, turn off the power and contact your dealer.

If you continue to use the camera when there is something wrong with it, the trouble may much worse and an unpredictable accident may occur.